# **Easylight** Installation Manual

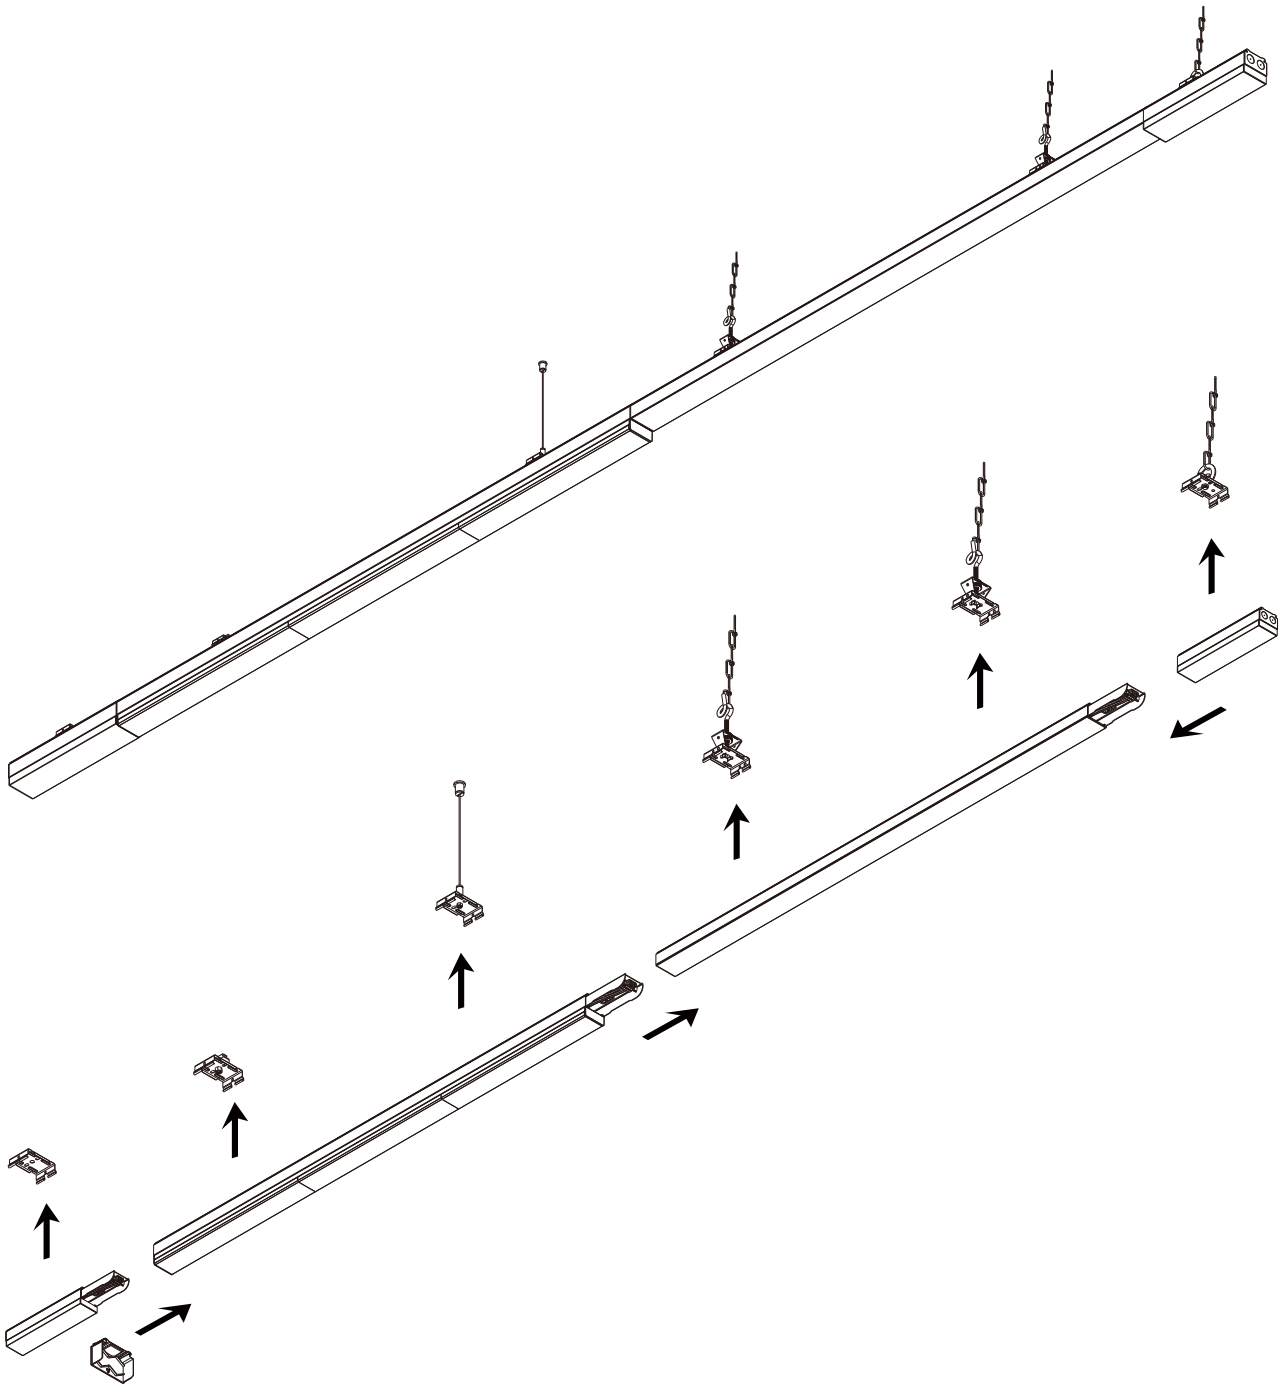

## Luminaire [mm]

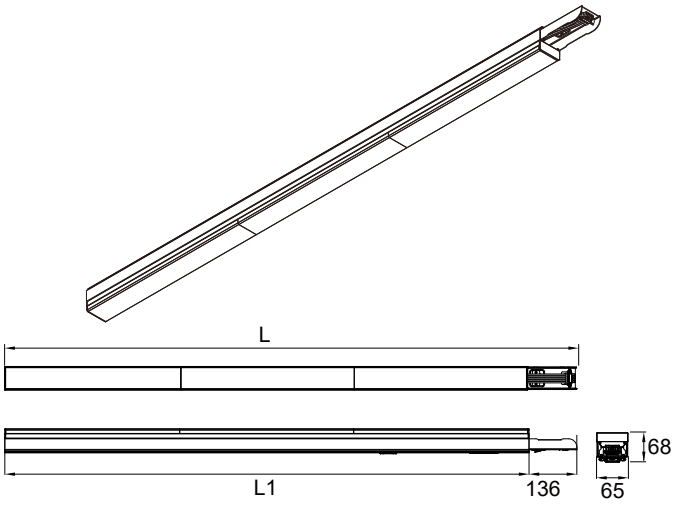


| L | L1 |
|---|---|
| 1636 | 1500 |
| 2636 | 2500 |

## Blind Cover [mm]

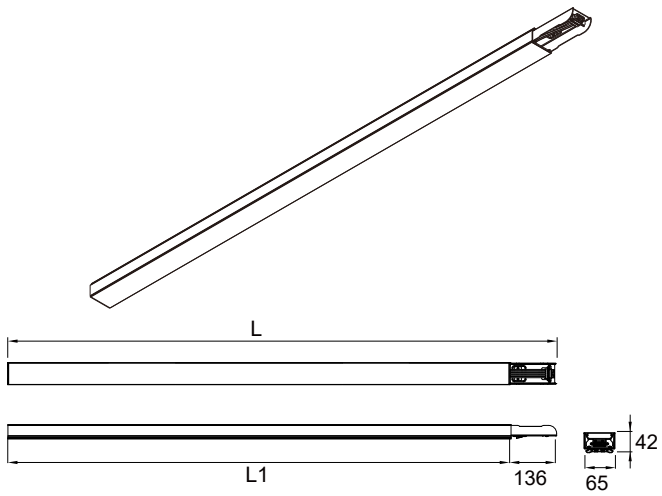


| L | L1 | Article No. |
|---|---|---|
| 1636 | 1500 | 1009234, 1010552, 1009235, 1010553 |
| 2636 | 2500 | 1009236, 1010554, 1009237, 1010555 |
| 4636 | 4500 | 1009238, 1010556, 1009239, 1010557 |

## Accessories For AC Input And Output [mm]

1009232, 1010550
1009233, 1010551

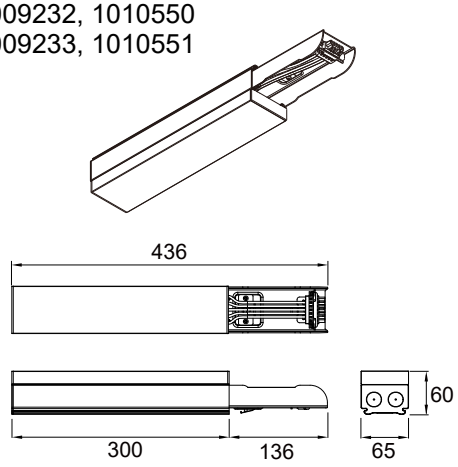


1009230, 1010548
1009231, 1010549

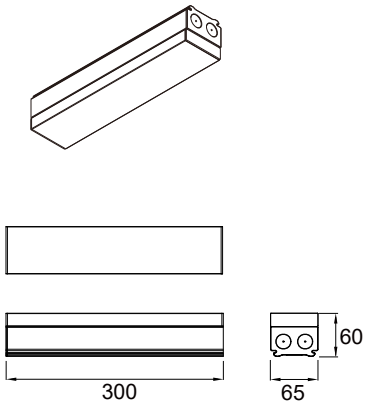


1009240
1010558

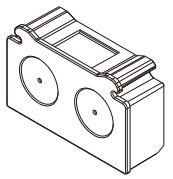

## Mounting Accessories

1009244, 1010563
1009245, 1010564

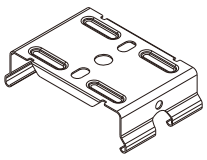

Surface Ceiling Fixing

1009241, 1010559

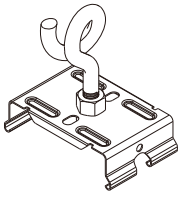

Chain Suspension only Bracket

1009243, 1010562
1009247, 1010561

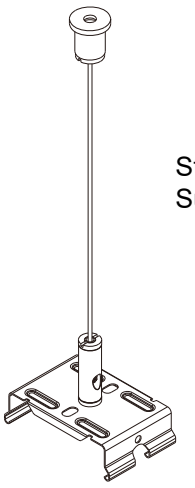

Steel Cable Suspesion Kits

1009246, 1010565

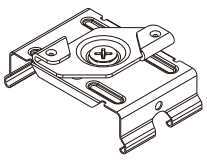

Surface mounted butterfly hook

1009242, 1010560

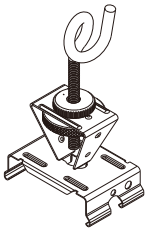

Chain Suspension only Bracket (Fine tune)

## Installation Steps

**1-a** Surface Ceiling Fixing

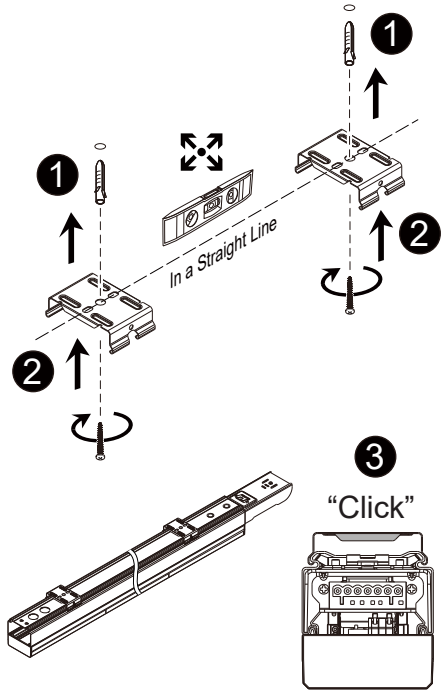


**1-b** Steel Cable Suspesion Kits

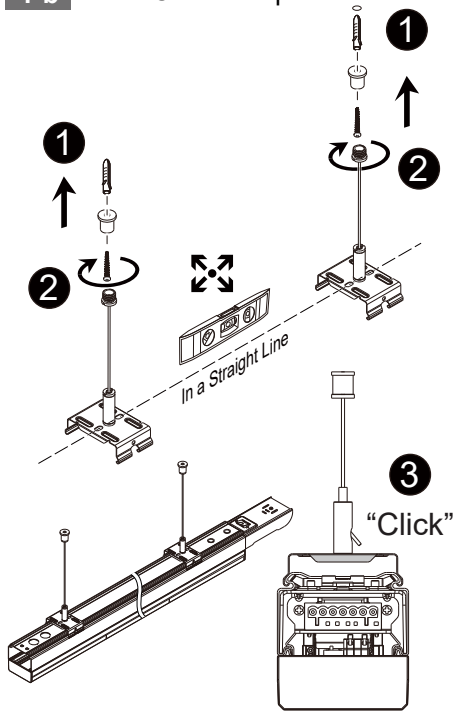


**1-c** Chain Suspension Kits

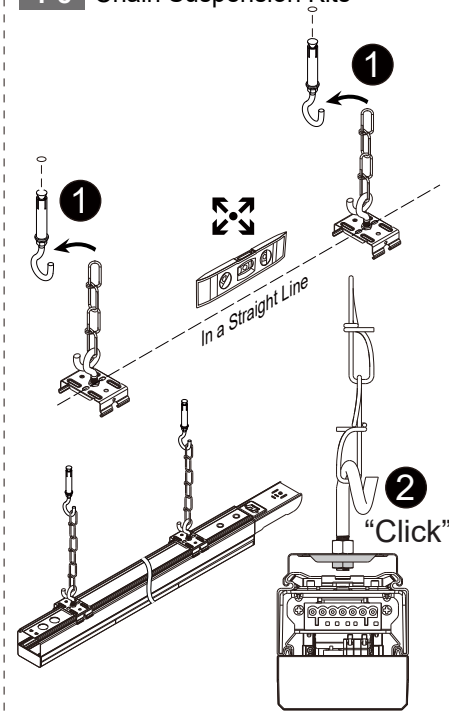


**1-d** Chain Suspension Kits

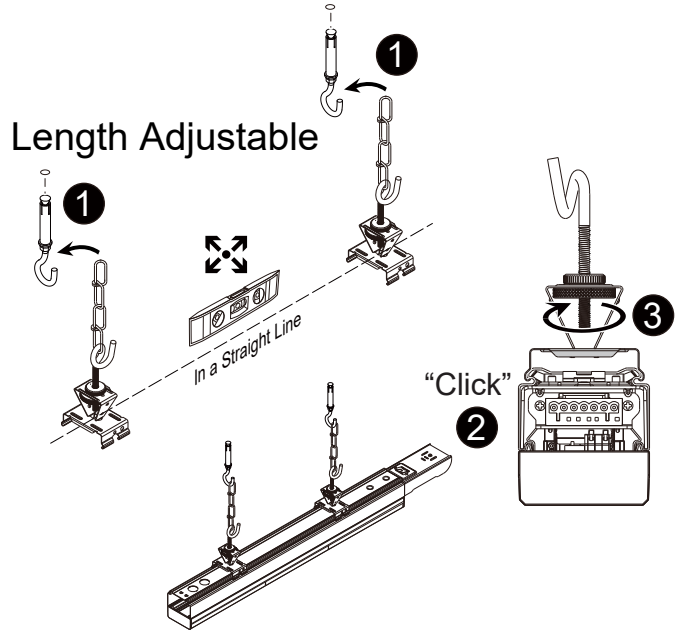


**1-e** Surface mounted butterfly hook

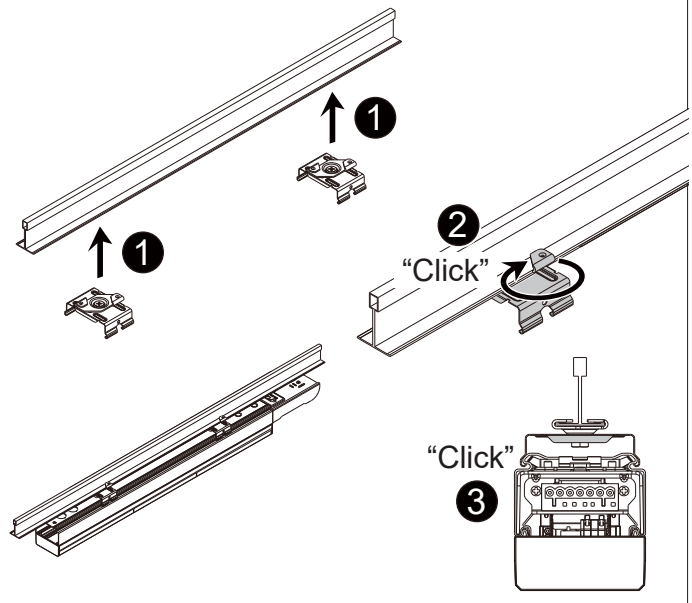


**Installation**

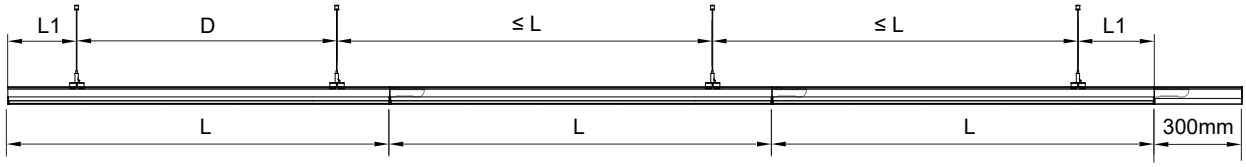


| Luminaire Length ( L ) | L1 | D |
|---|---|---|
| 1500mm | 300-400mm | max 900mm |
| 2000mm | 500-600mm | max 1000mm |
| 2500mm | 500-600mm | max 1500mm |
| 3000mm | 500-700mm | max 2000mm |
| 4500mm | 700-800mm | max 3000mm |

## Installation Steps

### 2 Mounting Luminaire

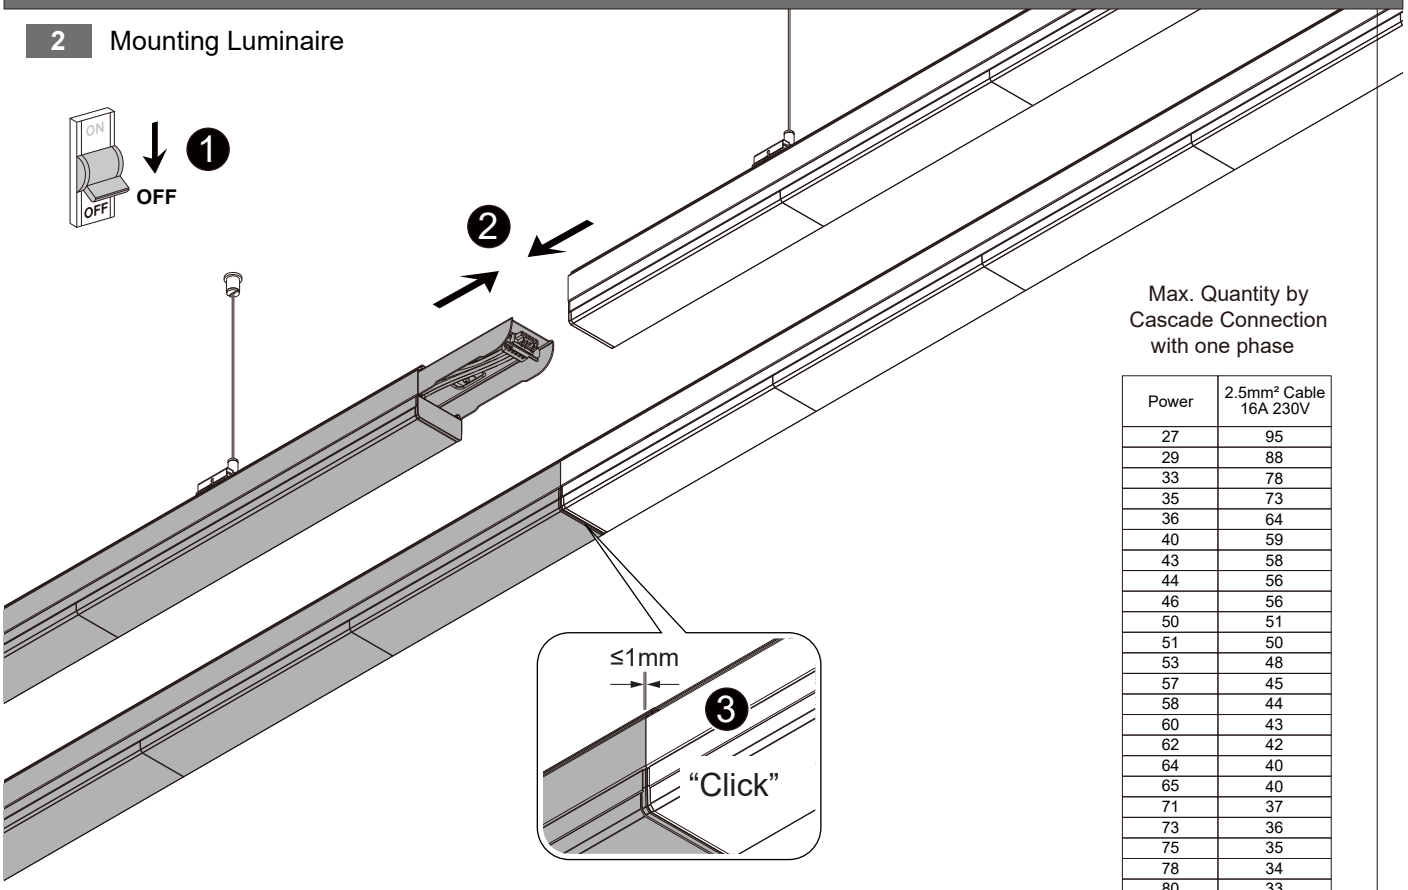


Max. Quantity by Cascade Connection with one phase

| Power | 2.5mm² Cable 16A 230V |
|---|---|
| 27 | 95 |
| 29 | 88 |
| 33 | 78 |
| 35 | 73 |
| 36 | 64 |
| 40 | 59 |
| 43 | 58 |
| 44 | 56 |
| 46 | 56 |
| 50 | 51 |
| 51 | 50 |
| 53 | 48 |
| 57 | 45 |
| 58 | 44 |
| 60 | 43 |
| 62 | 42 |
| 64 | 40 |
| 65 | 40 |
| 71 | 37 |
| 73 | 36 |
| 75 | 35 |
| 78 | 34 |
| 80 | 33 |

### 3 Mounting Next (Option)

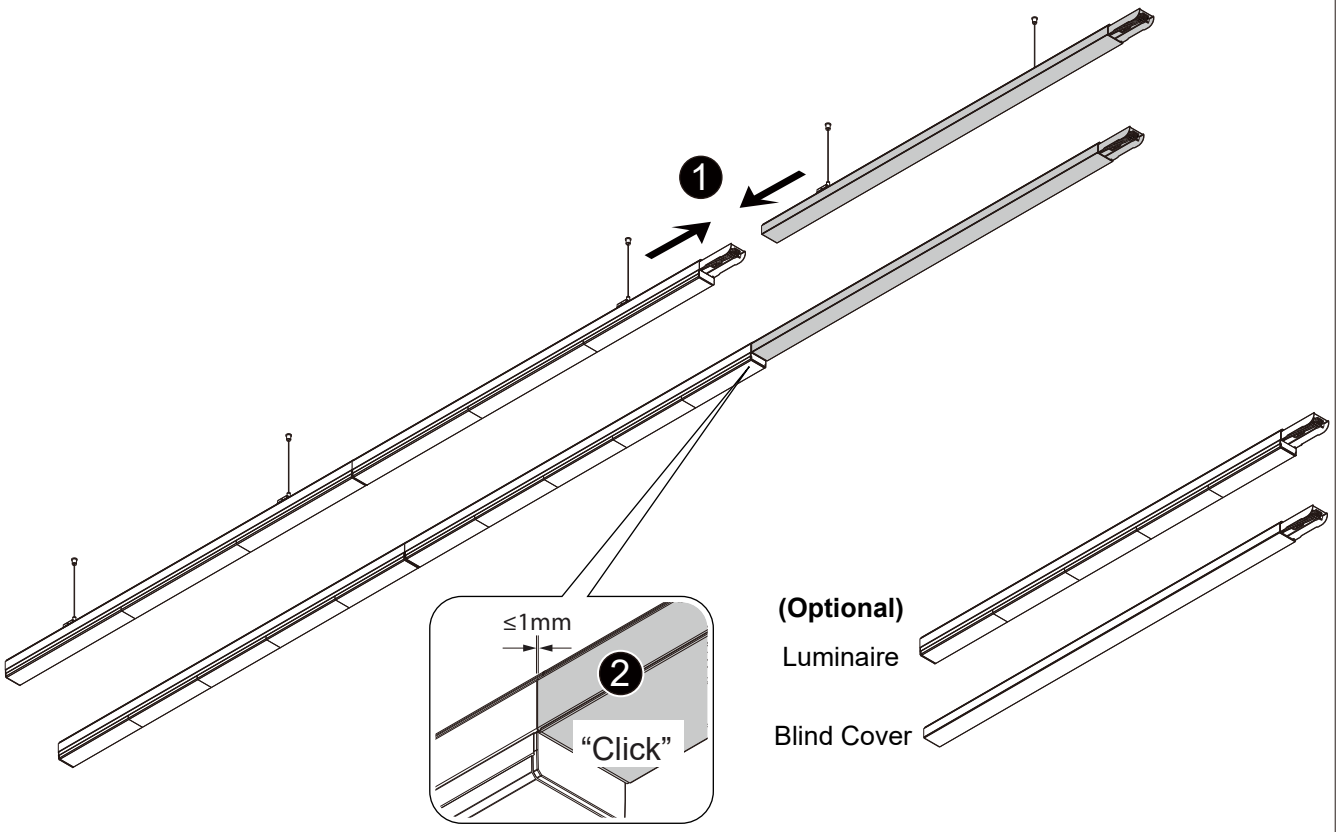

## Installation Steps

**4-a** Connecting Power Supply (Use the Feed In Box)

Connecting Wires from top or the side

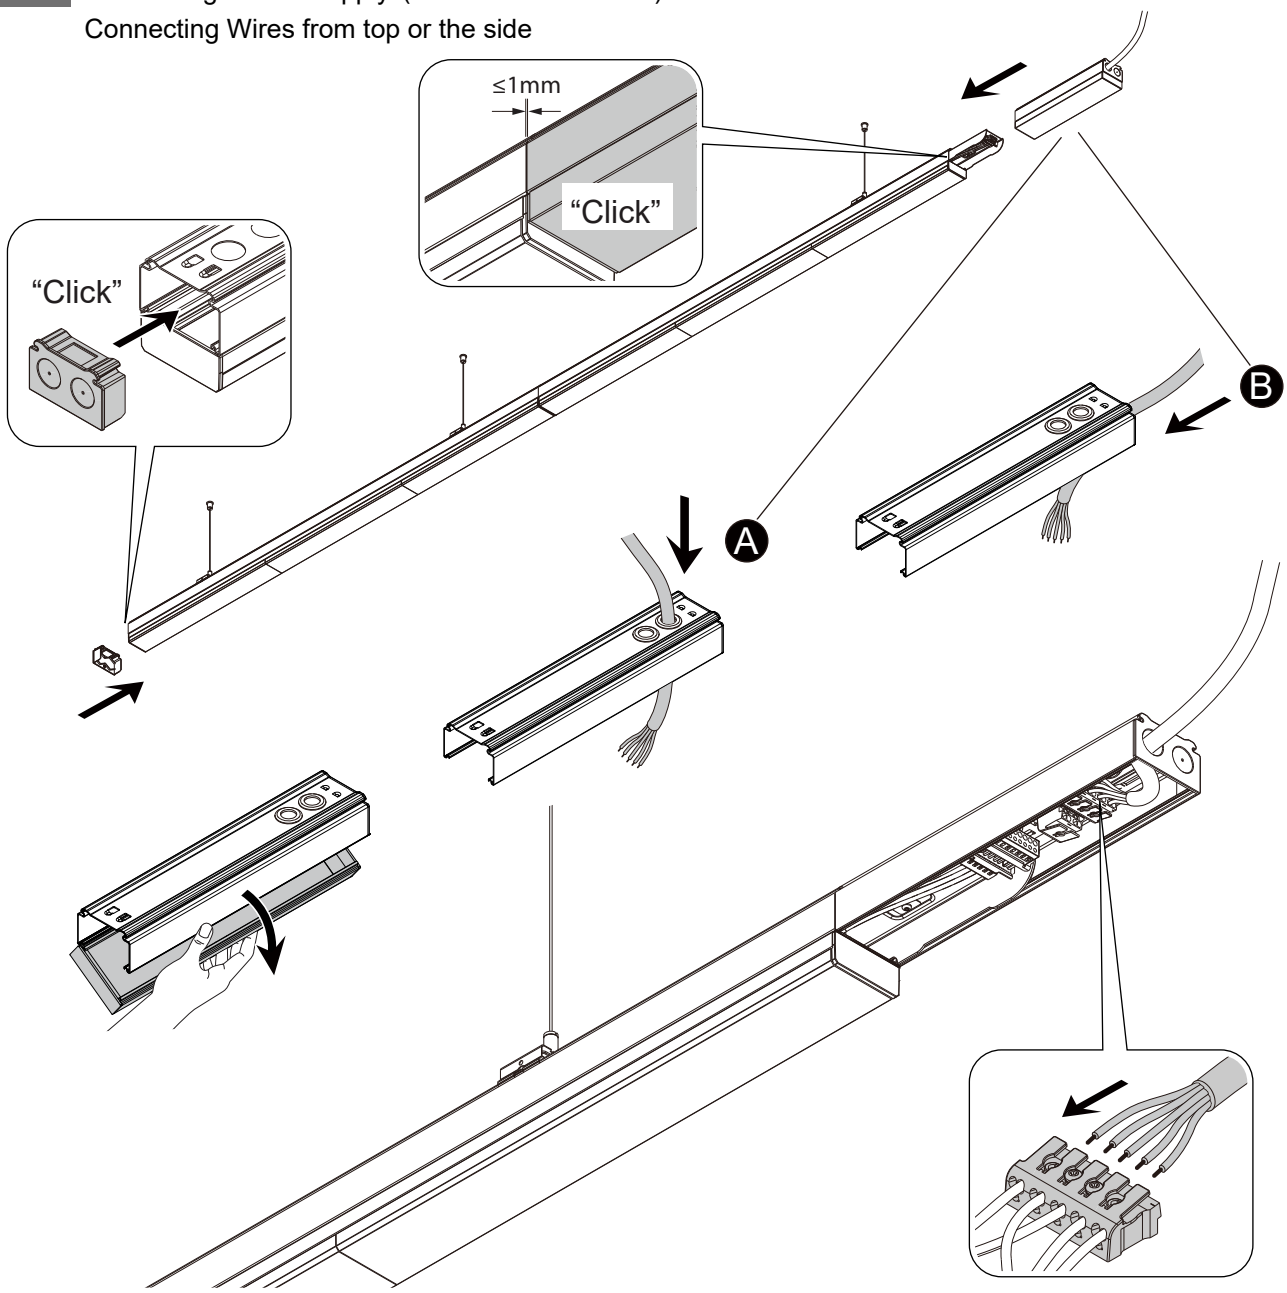


### 5 Wires specification:



Outer diameter: ø8mm≤C≤15mm
Core of cable: 5x2.5mm²

C

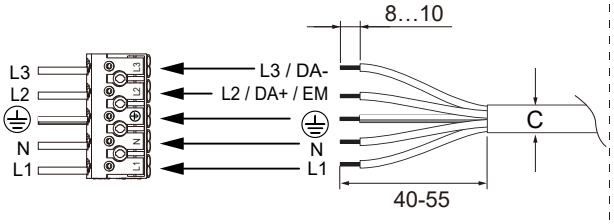


### 7 Wires specification:



Outer diameter: ø8mm≤C≤15mm
Core of cable: 5x2.5mm²

C



Outer diameter: ø8mm≤C≤15mm
Core of cable: 2x2.5mm²

C

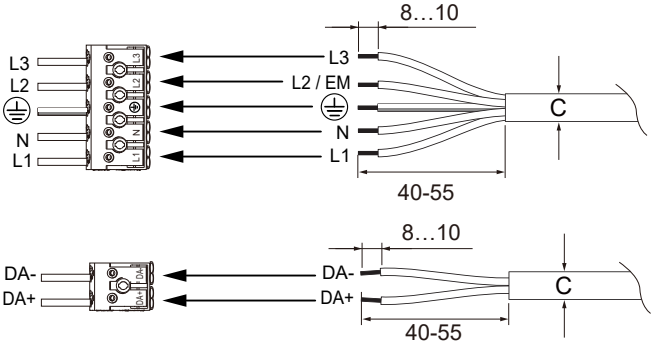

**4-b** Connecting Power Supply (Use the Feed Out Box)
Connecting Wires from top or the side

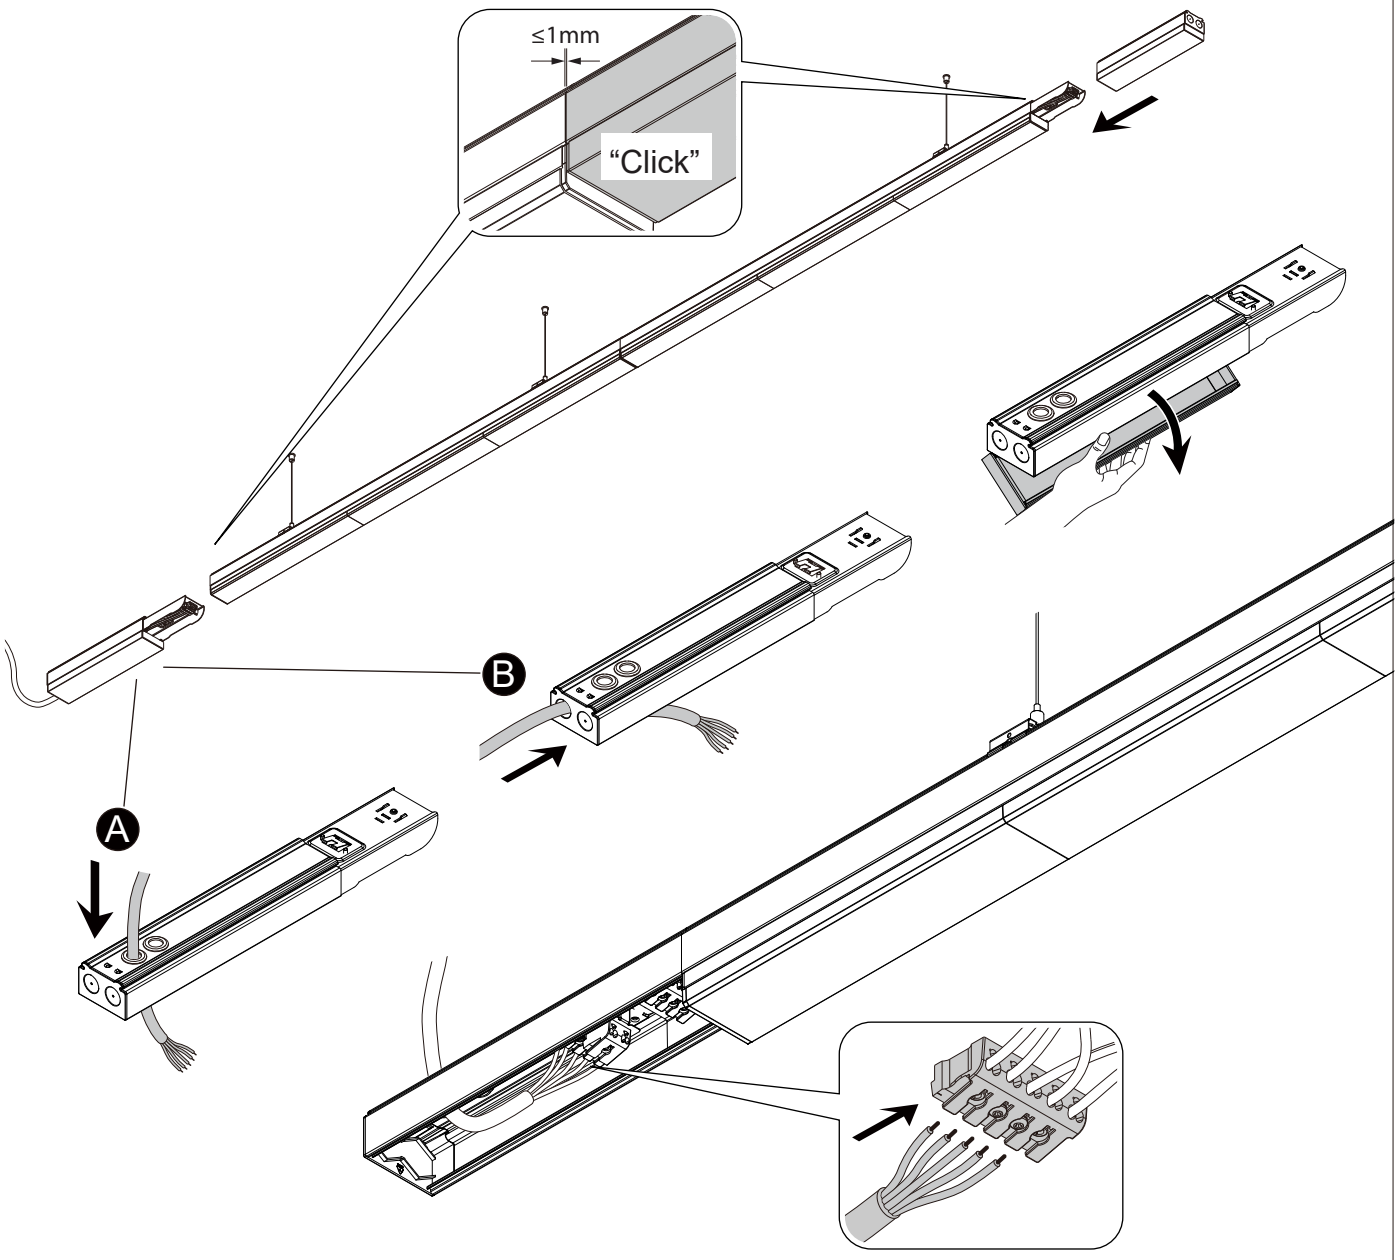


## 5 Wires specification:



Outer diameter: ø8mm≤C≤15mm
Core of cable: 5x2.5mm²

C

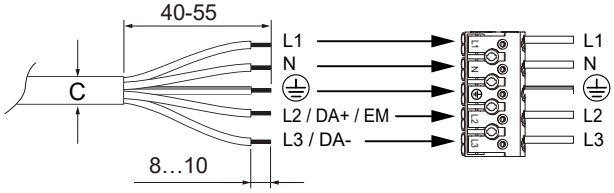


## 7 Wires specification:



Outer diameter: ø8mm≤C≤15mm
Core of cable: 5x2.5mm²

C



Outer diameter: ø8mm≤C≤15mm
Core of cable: 2x2.5mm²

C

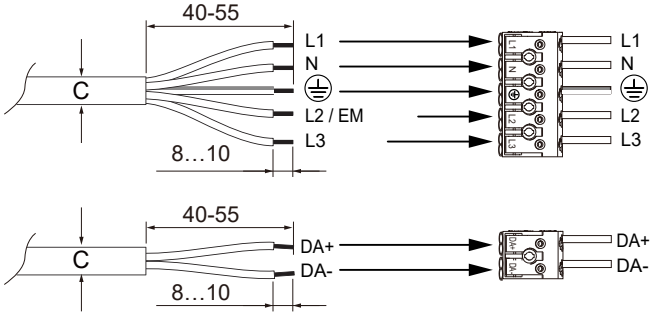

## Installation Steps

### 5 Wattage & CCT setting (Option)

ON OFF

| Output current [mA] | Switch position (ON/OFF) | | | 1009207, 1009208, 1009209, 1009210, 1009211, 1010525, 1010526, 1010527, 1010528, 1010529 | | | 1009217, 1009218, 1009219, 1009220, 1009221, 1010535, 1010536, 1010537, 1010538, 1010539 | | |
|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | Power [W] | Light effect [lm/W] | Flux [lm] | Power [W] | Light effect [lm/W] | Flux [lm] |
| 550 | OFF | OFF | OFF | 75 | 180 | 13500 | 80 | 189 | 15120 |
| 500 | ON | OFF | OFF | 68 | 182 | 12376 | 73 | 189 | 13797 |
| 450 | OFF | ON | OFF | 61 | 184 | 11224 | 65 | 190 | 12350 |
| 400 | ON | ON | OFF | 53 | 192 | 10152 | 58 | 191 | 11078 |
| 350 | OFF | OFF | ON | 46 | 189 | 8696 | 51 | 191.5 | 9767 |
| 300 | ON | OFF | ON | 40 | 189 | 7560 | 44 | 192.2 | 8457 |
| 250 | OFF | ON | ON | 33 | 190 | 6270 | 36 | 192.9 | 6944 |
| 200 | ON | ON | ON | 27 | 185 | 4992 | 29 | 193.6 | 5614 |

DALI

| Output current [mA] | Switch position (ON/OFF) | | | 1009212, 1009213, 1009214, 1009215, 1009216, 1010530, 1010531, 1010532, 1010533, 1010534 | | | 1009222, 1009223, 1009224, 1009225, 1009226, 1010540, 1010541, 1010542, 1010543, 1010544 | | |
|---|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | Power [W] | Light effect [lm/W] | Flux [lm] | Power [W] | Light effect [lm/W] | Flux [lm] |
| 550 | ON | ON | ON | 75 | 180 | 13500 | 80 | 189 | 15120 |
| 500 | ON | ON | OFF | 68 | 182 | 12376 | 73 | 189 | 13797 |
| 450 | ON | OFF | ON | 61 | 184 | 11224 | 65 | 190 | 12350 |
| 400 | ON | OFF | OFF | 53 | 192 | 10152 | 58 | 191 | 11078 |
| 350 | OFF | ON | ON | 46 | 189 | 8696 | 51 | 191.5 | 9767 |
| 300 | OFF | ON | OFF | 40 | 189 | 7560 | 44 | 192.2 | 8457 |
| 250 | OFF | OFF | ON | 33 | 190 | 6270 | 36 | 192.9 | 6944 |
| 200 | OFF | OFF | OFF | 27 | 185 | 4992 | 29 | 193.6 | 5614 |

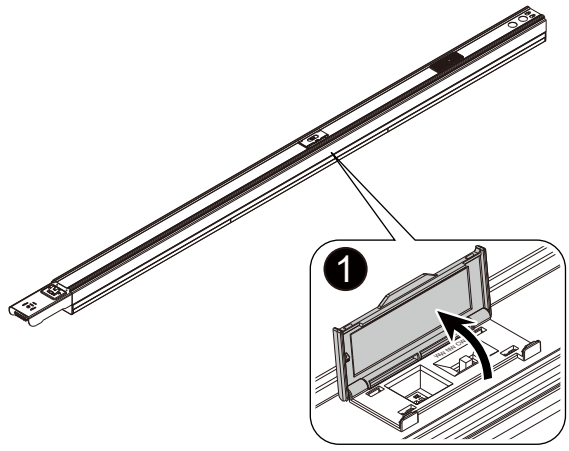


Wattage setting (Option)

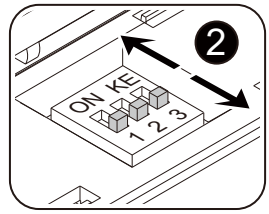


CCT setting (Option)

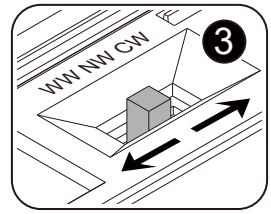


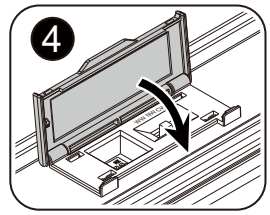


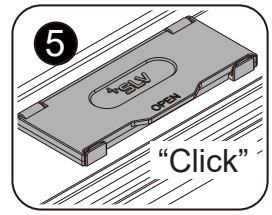


### 6 Phase Change (factory settings is L2)

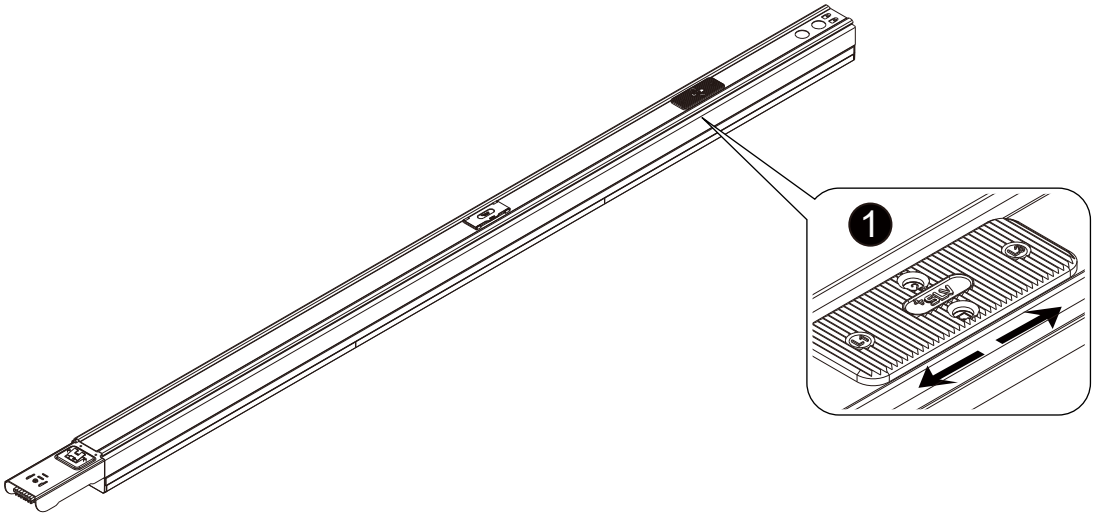

## Disassembly

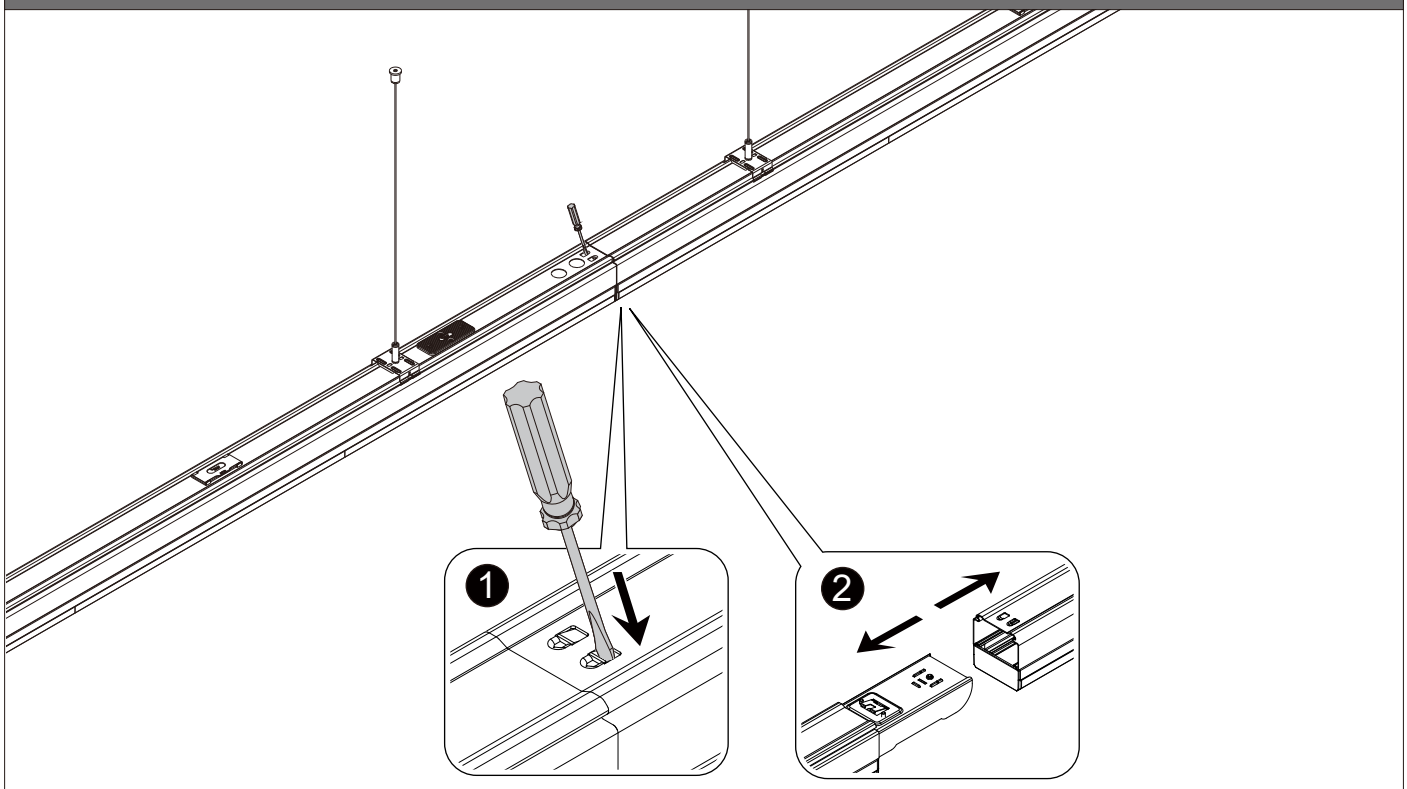


## IMPORTANT SAFETY NOTES

### WARNING

**RISK OF ELECTRIC SHOCK**

### BEFORE YOU BEGIN

- Read these instructions completely and carefully.
- The installation and connection of the luminaire must be done when switched off and by qualified people. Make sure no voltage while installation.

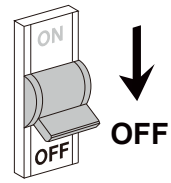


### MAINTENANCE

**CAUTION**

- To avoid injuries, disconnect power to the light and allow the unit to cool down before performing maintenance.
- Perform visual, mechanical and electrical inspections on a regular basis. We recommend routine checks to be made on an annual basis. Frequency of use and environment should determine this
- The Covers should be cleaned periodically as needed to ensure continued photometric performance.Clean the Cover with a damp, non-abrasive, lintfree cloth. If not sufficient, use mild soap or a liquid cleaner. Do not use an abrasive, strong alkaline or acid cleaner as damage may occur.
- Inspect the topside on the luminaire to ensure that it is free of any obstructions or contamination (i.e.excessive dust build-up). Clean with a non-abrasive cloth if needed.

**B** This product contains a light source of energy efficiency class B.

22.04.2025 SLV GmbH, Daimlerstrasse 21-23, 52531 Übach-Palenberg, Germany Made in China